

Installing Shadow Gap Cladding Horizontally



1) Install wooden / aluminium or composite battens to desired area at 400mm centres.



2) Please ensure where boards butt together additional battens are added as per photo



3) Secure cladding board in place by screwing supplied screws in pre drilled holes. Please remember not to screw too tight, TRUclad needs to be able to expand and contract.



4) Repeat process to achieve desired height



5) Finish cladding area by using angle trim, secure using coloured screws, please ensure you use countersink drill bit supplied in order to pre drill holes.

Falcon Timber Ltd will take no responsibility for installation issues that arise where installer(s) have not followed the installation guide, resulting in the warranty being voided.

Falcon Timber Ltd will take no responsibility for scratching and/or poor maintenance of TRUclad composite cladding.

Installing Shadow Gap Cladding Vertically


TRUclad



1) Install wooden / aluminium or composite battens to desired area at 400mm centres.



2) Please ensure where boards butt together additional battens are added as per photo

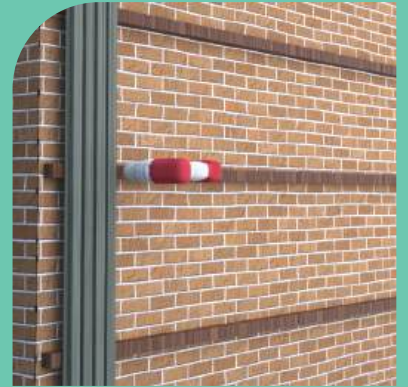

3) Secure cladding board in place by screwing supplied screws in pre drilled holes. Please remember not to screw too tight, TRUclad needs to be able to expand and contract.



4) Repeat process to achieve desired height



5) Finish cladding area by using angle trim, secure using coloured screws, please ensure you use countersink drill bit supplied in order to pre drill holes.

Falcon Timber Ltd will take no responsibility for installation issues that arise where installer(s) have not followed the installation guide, resulting in the warranty being voided.

Falcon Timber Ltd will take no responsibility for scratching and/or poor maintenance of TRUclad composite cladding.